



Bristolite® Skylights

401 E. Goetz Avenue
Santa Ana, California 92707


(714) 540-8950 (800) 854-8618 Fax (714) 540-5414

UL/FM SMOKE VENT OPERATION INSTRUCTIONS

Before Installation


WARNING! DO NOT SET UNIT ON FLAT ROOF AREA BEFORE INSTALLATION!

Be certain at least one side is raised off the roof for air circulation. Heat build up can activate the fusible links, resulting in **costly charges** for repair and closing.

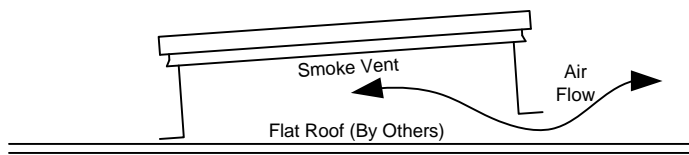

Step 1

Installation surface to be *flat*. Any field variation shall be taken up by proper shimming in field.

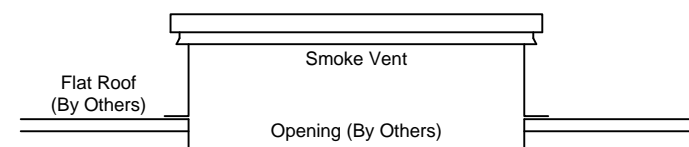


Step 5

Vent lids are closed and re-latched by a minimum of **TWO** people by firmly pushing on indicated areas. Be sure the latch is fully engaged.

**PUSH HERE
TO CLOSE**

Step 2

Attachment fasteners (by others) to be placed in all flange holes provided.

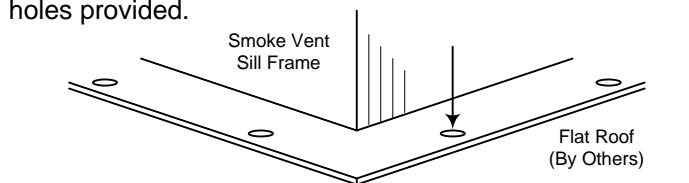

Step 6


Consult with Bristolite® if an interior manual release is used. A strain-relief spring must be used to support the weight of pull cables and related hardware.

Step 7

Consult your local building official for operation, testing and recordkeeping requirements for your specific project.

Step 3

After installation is complete, **cautiously** remove lid hold-down straps located at both ends of unit.

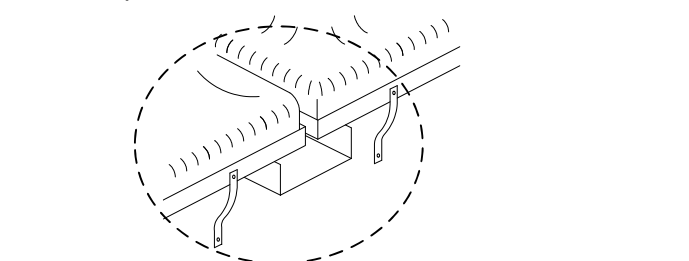


Step 8

Installation must be in accordance with the Guide for Smoke and Heat Venting, NFPA 204M-1991.

Step 4

CAUTION! - Stand Clear!

Open smoke vent completely by a **sharp** pull on the **outside** manual release handle.

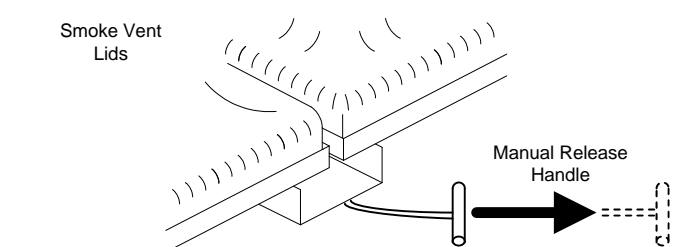

WARNING!

"This skylight is designed to withstand normal elements of the weather. It is not designed to withstand human impact or falling objects. This skylight should not be walked upon under any circumstances. The owner or designer should restrict access only to authorized personnel who have been adequately cautioned as to the location of the skylights and informed of the warnings above, or said owner should provide protective guardrails or screens around the skylights."